


Connecting to RAMS Viewer with Google Chrome

1. Enter the URL for the RAMS Viewer into Chrome: <https://javadgnss.net/rams-viewer/>
2. Click on the *View Site Information* button  located directly to the left of the URL
3. Click *Site Setting* from the menu.
4. Scroll down to *Insecure content* and change this option to Allow.
5. Reload the tab with RAMS Viewer.
6. Type rams.javad.com:8800 in the Server connections box and click the Add button

Server connections

