

SET UP ROVER ANTENNA

Tap on [UHF STATUS] Top row. Third from left.

Tap on [CONFIGURATION] To bring up next screen.

Tap [INTERNAL] or [EXTERNAL]

Tap [OK] goes back one screen.

TAP [ESC]